

PARTS LIST

Model 206RBATC

Model 206RBATCL













 







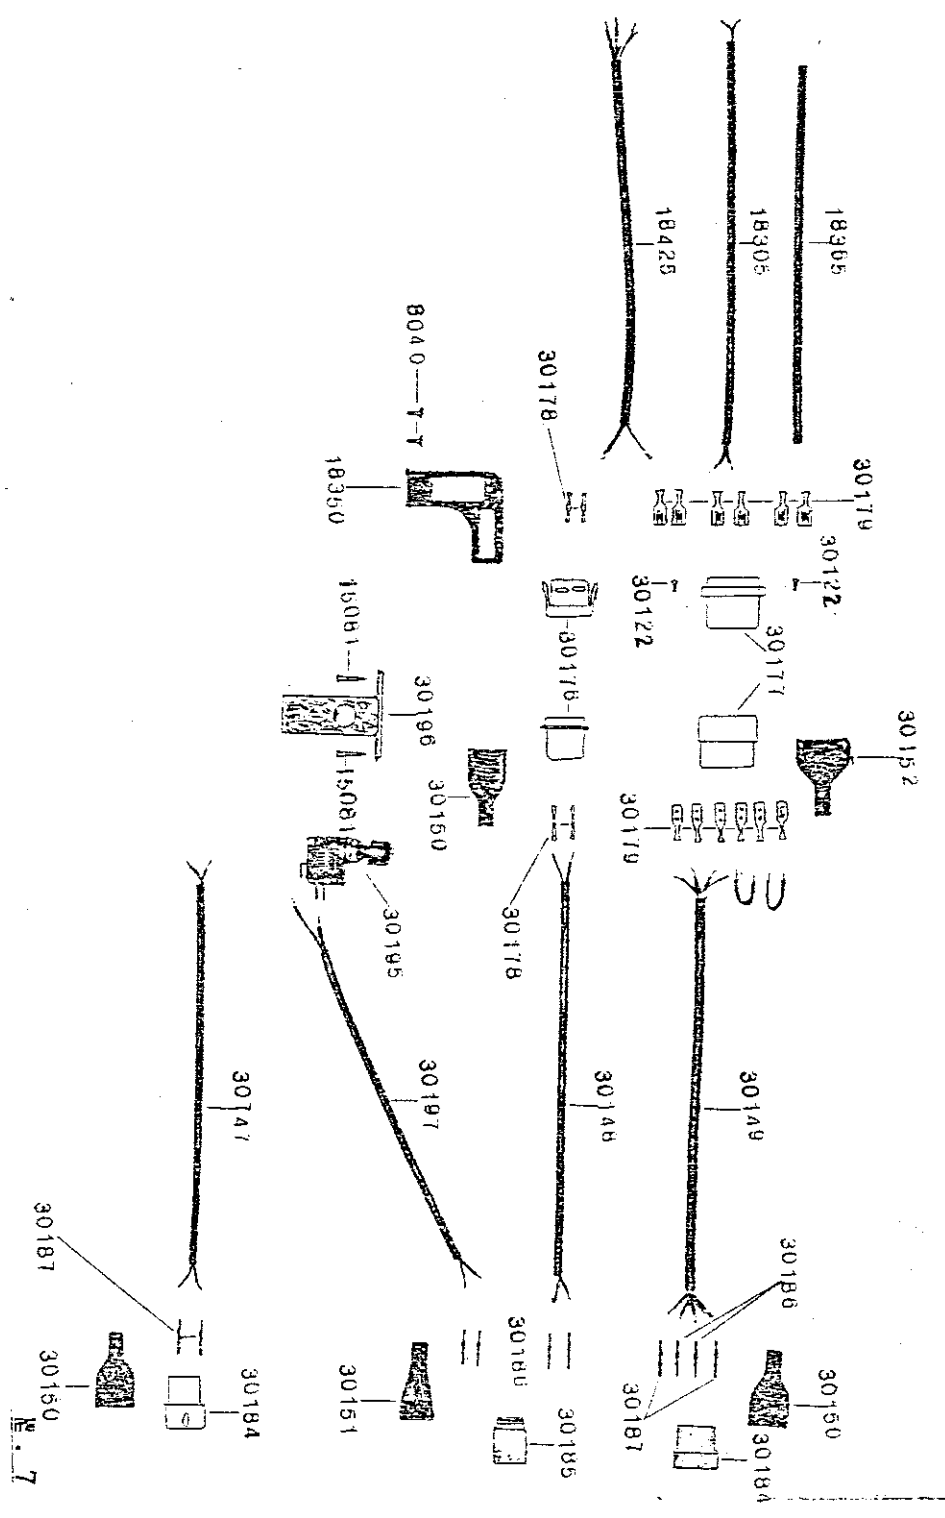




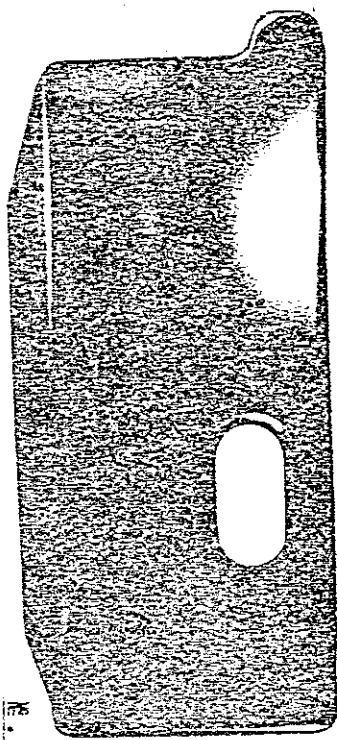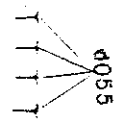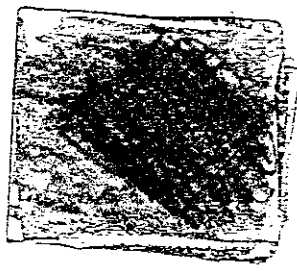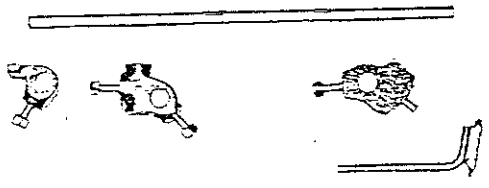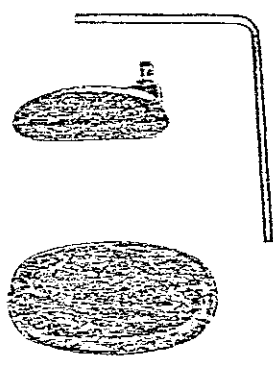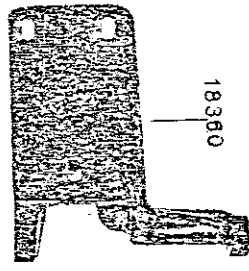




8132

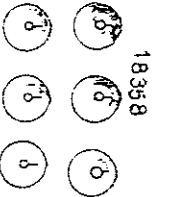


18358

 


6332

 300120



1832A


1834 A

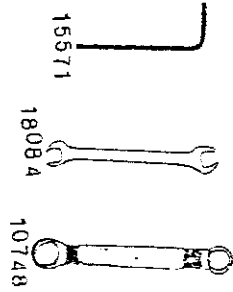


15571

18084

 10748



6052

 

30194



 
6051



8118





8120




8121



 8123

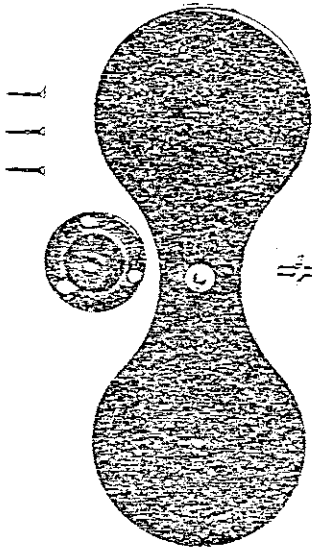

10780

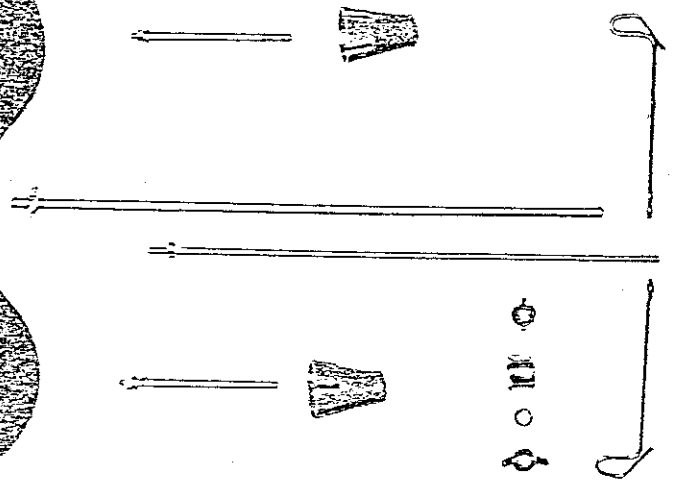

K. 9